




BMW Boost Tap Fitting Instructions


1. Locate the map sensor and undo the 2 screws to remove it.



2. Insert the sensor into the correct side of the Forge boost tap as shown below.

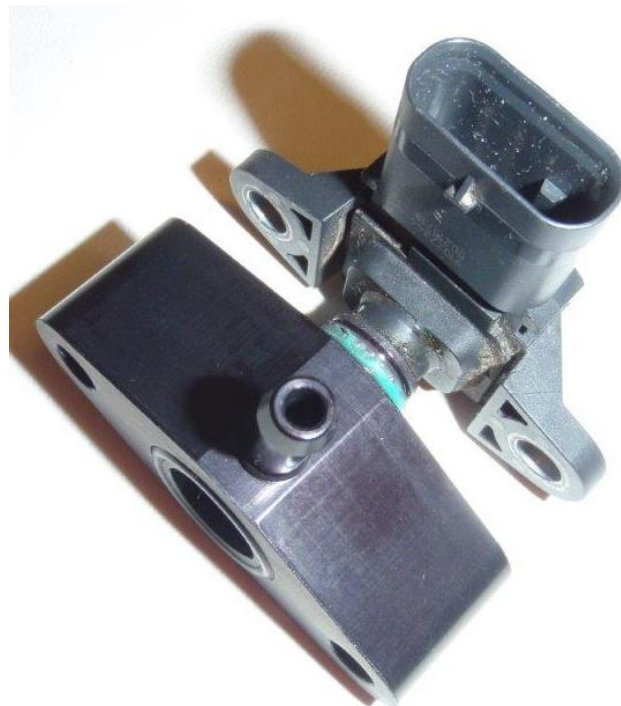

3. Refit using the longer screws supplied.

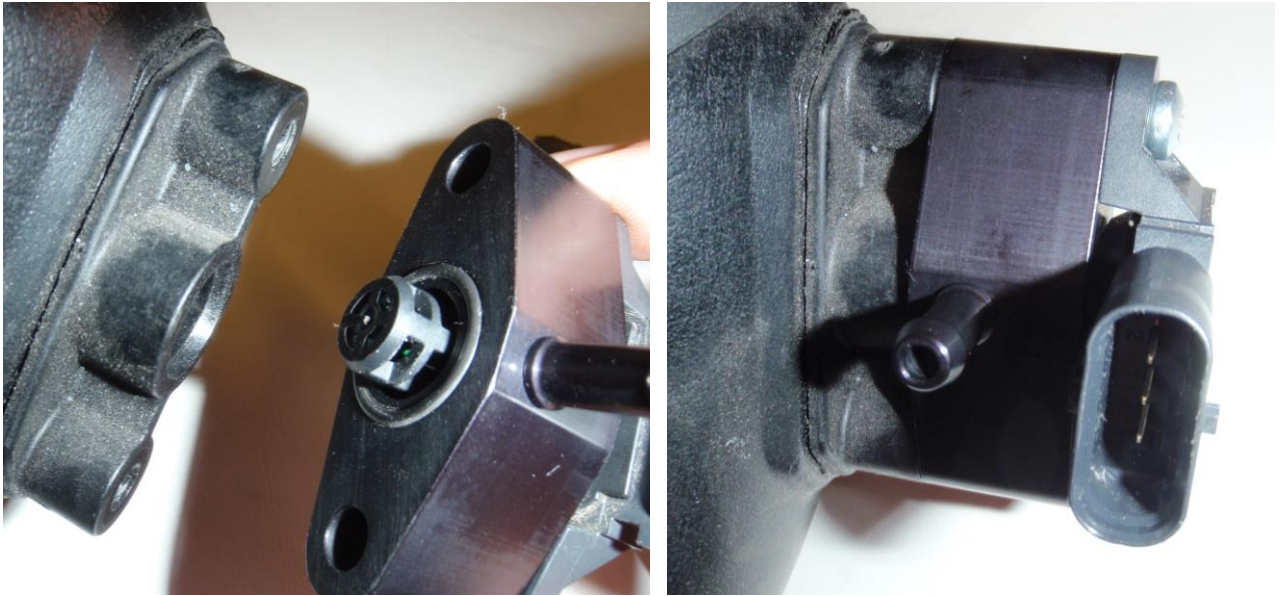

4. Fit the supplied hose to the nipple and route to the required location.

Check out WWW.FORGEMOTORSPORT.CO.UK and WWW.FORGEMOTORSPORT.COM

For a full range of performance products for your vehicle.

As always, with any questions or concerns about this product or anything else, please feel free to contact your local or preferred Forge Motorsport Dealer/ Installer, or you may contact us directly.

Forge Motorsport UK – (+44)1 452 380 999 / info@forgemotorsport.co.uk

Forge Motorsport US – (407)-447-5363 / sales@forgemotorsport.com



ENGINEERED FOR PERFORMANCE