



## FMKT029 RS6/7 C8 Inlet hoses



**Please thoroughly read through and familiarise yourself with these instructions in their entirety prior to beginning any part of the installation process of any component. Please also ensure the vehicle and engine has cooled down sufficiently to avoid risking possible skin burns or other injury.**

### **TOOLS NEEDED:**

**T25 Torx drive**


**Hose clamp drive or 7mm socket with suitable extension**



1. Lift the bonnet of the vehicle, once the engine has cooled remove the engine cover by pulling upwards in a sharp motion.



2. Using a T25 torx drive remove the 7 fasteners that hold the airbox lid in position. Please note these do not come fully away from the airbox lid.

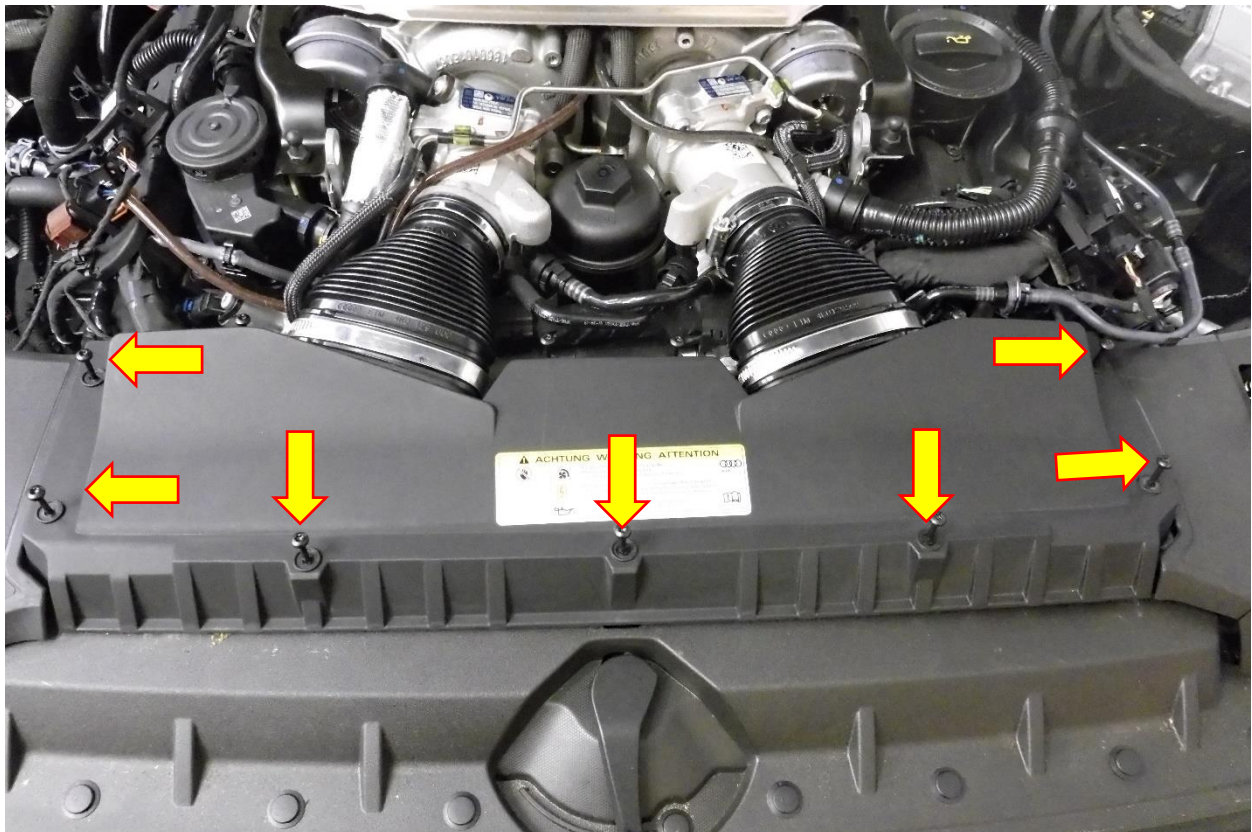

3. Using a hose clamp remover or 7mm Torx drive undo both the hose clamps on each inlet hose then remove the hoses from situ.
4. The Forge Motorsport hoses may now be fitted. The underside of the hoses are numbered. Please note hose 1997 is for the left hand bank and 1998 for the right hand bank when viewed from the front of the vehicle.
5. Tighten the hose clamps and your installation is complete.



Check out [WWW.FORGEMOTORSPORT.CO.UK](http://WWW.FORGEMOTORSPORT.CO.UK) and [WWW.FORGEMOTORSPORT.COM](http://WWW.FORGEMOTORSPORT.COM)

For a full range of performance products for your vehicle.

As always, with any questions or concerns about this product or anything else, please feel free to contact your local or preferred Forge Motorsport Dealer/Installer, or you may contact us directly.

Forge Motorsport UK – (+44)1 452 380 999/info@forgemotorsport.co.uk

Forge Motorsport US – (407)-447-5363/[sales@forgemotorsport.com](mailto:sales@forgemotorsport.com)



[www.facebook.com/forgemotorsport](http://www.facebook.com/forgemotorsport)



[@forgemotorsport](https://twitter.com/forgemotorsport)



[@forgemotorsport](https://www.instagram.com/forgemotorsport)